1 Ambient-air filter

1.1 Replacing the ambient-air filter

1 Swivel inspiratory port down (Fig. 1/1).

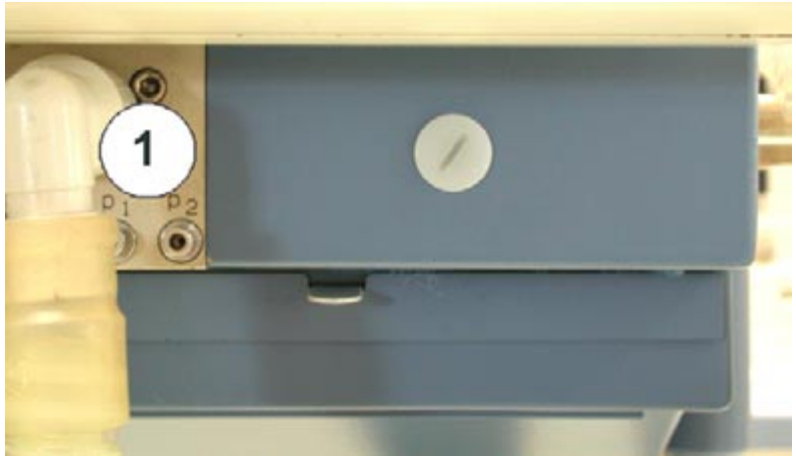

Fig. 1 Front view of the machine, protective cover

2 Loosen screw (Fig. 2/1) with an appropriate screwdriver and remove the protective cover.

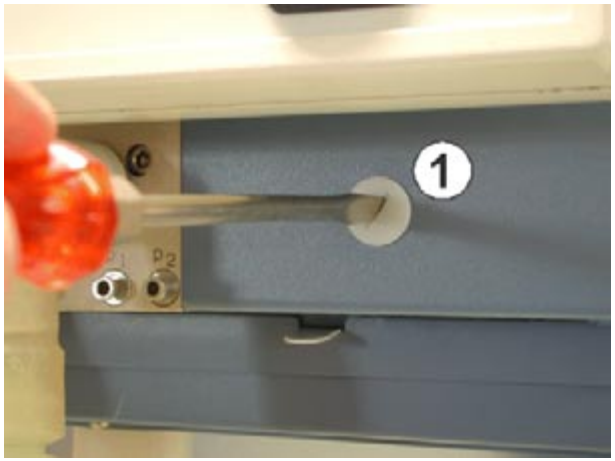

Fig. 2 Protective cover

3 Remove the ambient-air filter (Fig. 3/1) from the tabs on the protective cover.

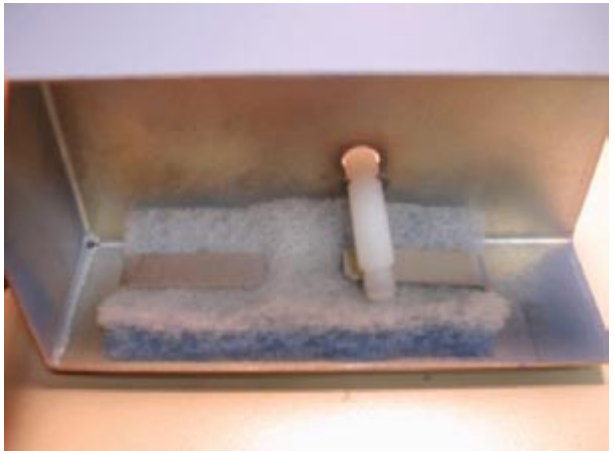

Fig. 3 Ambient-air filter

All rights reserved. Copyright reserved • W5664590T02_Wartung_Raumluftfilter.fm 18.07.02 • Maintenance Procedures • Version 1.0 • Released

If ambient-air filter is dirty, clean it in warm water with detergent added; allow to dry well. Continue with step 4.

If ambient-air filter is damaged, dispose of it according to local waste disposal regulations.

4 Slide new or cleaned ambient-air filter under the tabs on the protective cover, making sure the fitting position is correct, see Fig. 3/1.

5 Replace the protective cover on the machine, and tighten the screw (Fig. 2/1) with an appropriate screwdriver.

All rights reserved. Copyright reserved • W5664590T02_Wartung_Raumluftfilter.fm 18.07.02 • Maintenance Procedures • Version 1.0 • Released